

Replacing the PRV

1. Switch off power to the tank.
2. Open the boiling handle on the tap and drain water into the sink until it is cool (Tank capacity 4 1/2 liters)
3. Close the shut off valve to the filter housing (Green handle)
4. Open the boiling handle on the tap once more to release pressure in the pipe run.
5. Remove the tundish pipe from the waste.
6. Undo the nuts on either side of the PRV and remove.
7. Install the new PRV and tundish tightening the nuts to create a seal.
8. Insert the tundish pipe into the waste.
9. Open the shut off valve.
10. Check for leaks.
11. Switch the tank back on.
12. Allow 20 minutes for the tank to re-heat.

FRANKE

GRL Direct
+44 (0)1603 875468
support@grldirect.co.uk
www.grldirect.co.uk

GRL DIRECT

Genuine, manufacturer-approved filter cartridges and parts