



IMPORTANT! BEFORE YOU BEGIN

Before you begin deep cleaning your boiler tank, please carefully read the instructions on the cleaning fluid's labelling. Having an old towel to hand is helpful. Do not use the cleaning fluid if the packaging has been damaged.

Do not use the cleaning fluid if the packaging has been damaged.

1. Turn off the power and water to the tank. Wait 4 hours, or preferably overnight, for the water in the tank to cool.
2. Run the boiling water flow until it is exhausted. If you have no flow continue the cleaning process.
3. Press the red pressure release button on the top of the filter housing. A few droplets of water is normal.
4. Unscrew the lower section of the filter housing (sump), and empty the residue water into the sink. Place the cartridge into the sink.
5. Carefully pour all of the cleaning fluid into the sump.
6. Replace the filter sump and gently tighten it back into position.
7. Turn on the water to your boiler tank and filter system.
8. Allow 15 minutes of waiting time. **IMPORTANT!** Do **not** turn on the power to the tank.
9. Run the boiling water for 30 seconds to see if the deep clean has been successful.
10. Switch the boiler tank on. Allow 20 minutes for the tank to reheat. 4L tanks will show 2 x green LEDs.
11. Run the boiling side of your tap for 10 minutes. Some spluttering or odour is normal.
12. Run the filtered side of your tap for 10 minutes.
13. Repeat Steps 11 & 12. Run the boiling water for 10 minutes, then the filtered water for 10 minutes.
14. Turn off the power to the boiler tank.
15. Run the flow of boiling water until it is exhausted.
16. Turn off the water, then replace the filter cartridge back into the filter housing.
17. Turn the water and power back on.
18. The tank deep clean is complete.



GRL Direct
 +44 (0)1603 875468
 support@grldirect.co.uk
 www.grldirect.co.uk